



VTech CS6719-2 Button Replacement

Button Replacement guide is a procedure to replacement the button keypad for the VTech CS67192 phone.

Written By: Nick Boyd



INTRODUCTION

Button Replacement guide is taking the battery out of the VTech CS67192 phone to ensure safety. Then opening the back of the phone off by unscrewing the back of the phone which will give access to the buttons.



TOOLS:


- [Heavy-Duty Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- Push down on the battery cover in the direction of the arrow located on the back of the phone.

Step 2

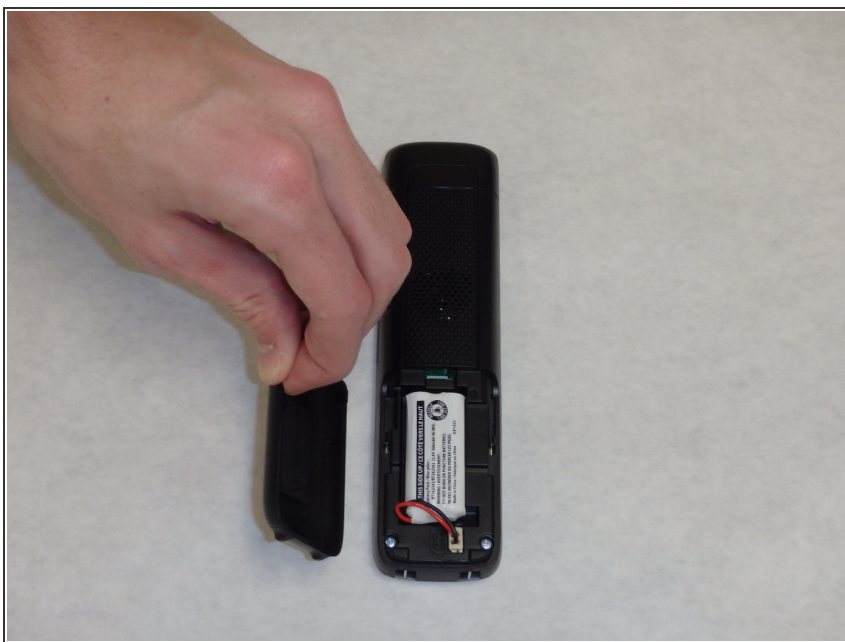


- Pull the battery cover off of the back of the phone

Step 3

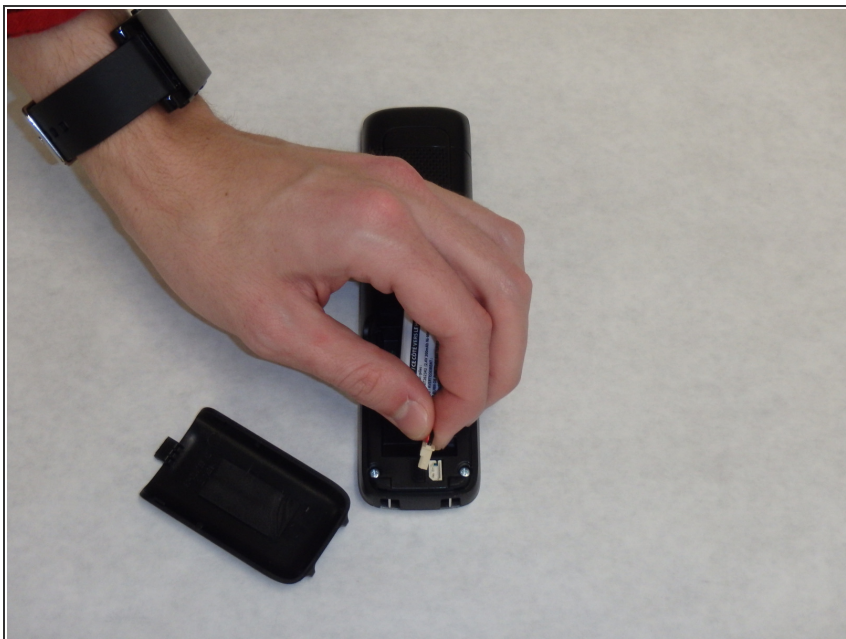


- Unplug the battery input cable.

Step 4

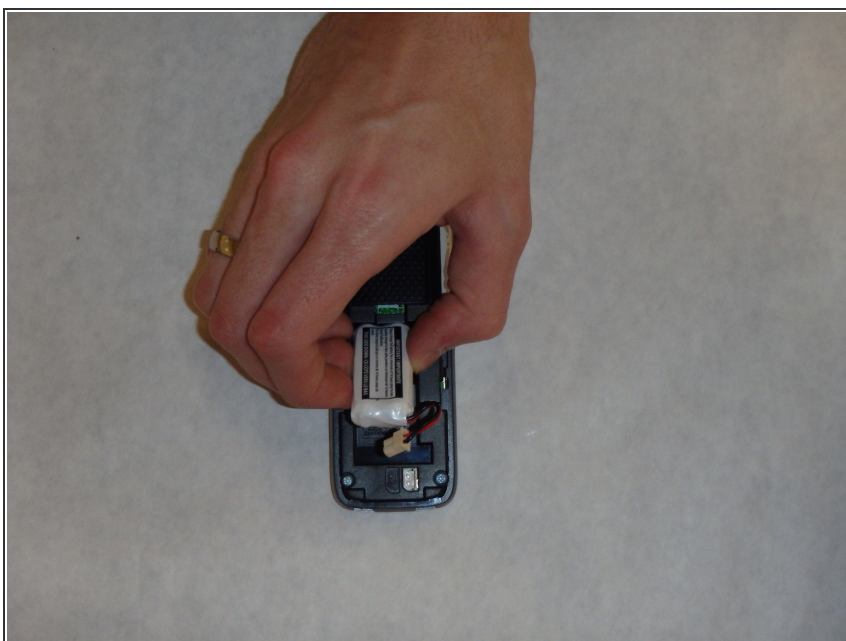


- Lift the battery out of the back of the phone.

Step 5 — Circuit Board

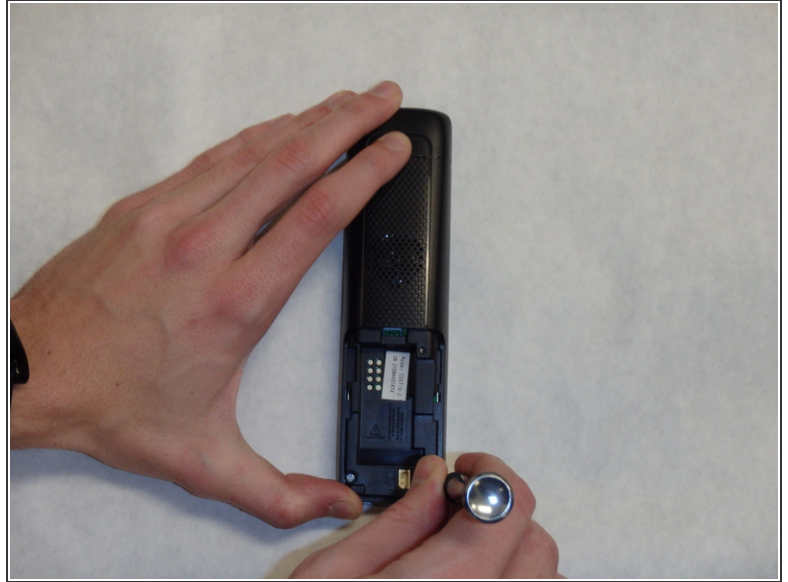



- Remove the two screws (9mm) on the back side with a Phillips #0 screwdriver.

Step 6

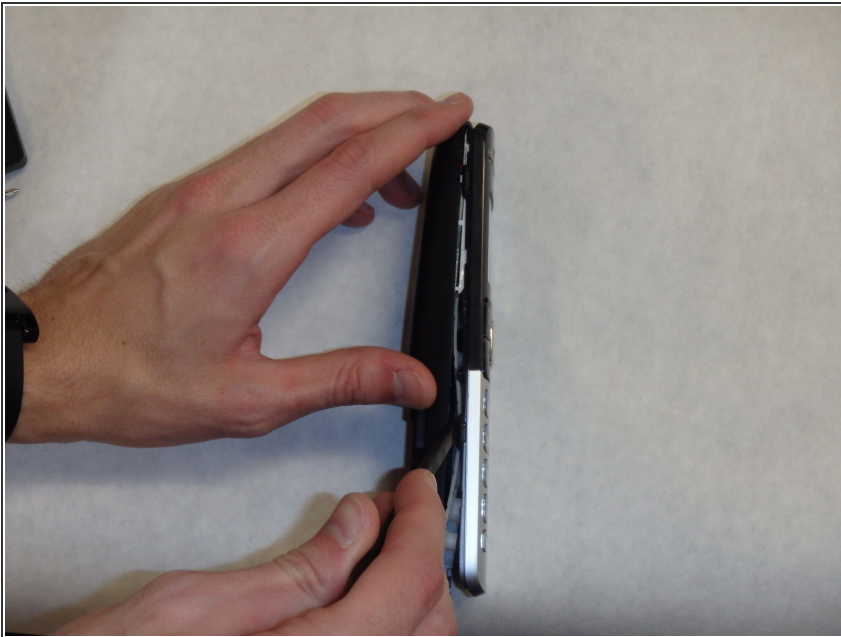

- Use the plastic opening tool and spudger to pry the back side of the phone off.

Step 7

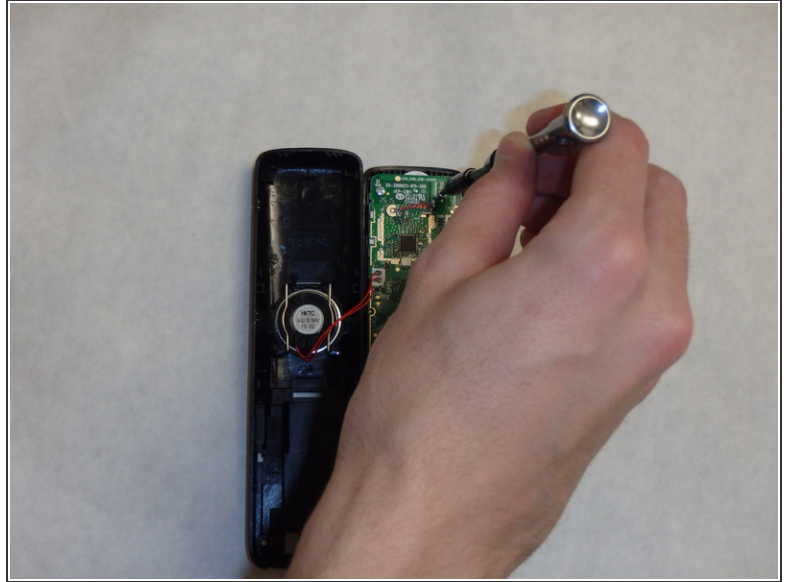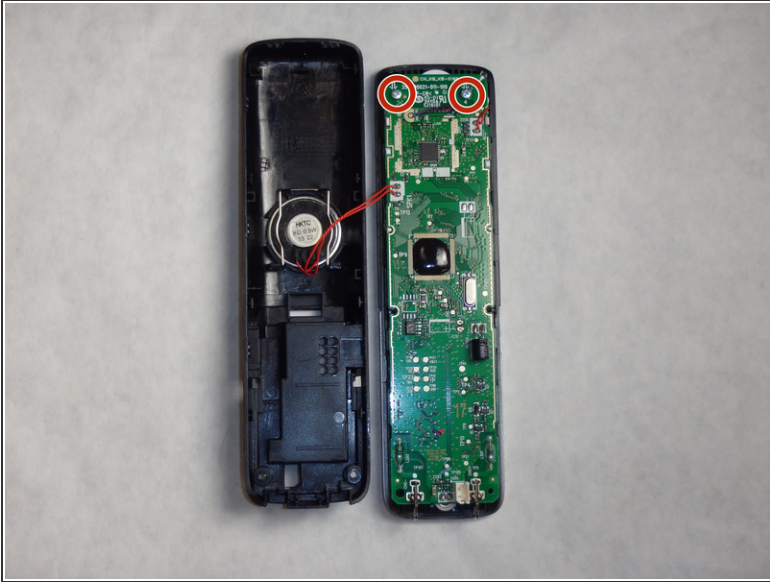


- Remove the two screws(9mm) located inside the back cover at the top.

Step 8 — Button



- Remove the white sheet of rubber located between the circuit board and the buttons
- ⓘ When removing the circuit board, the rubber sheet may fall off

Step 9

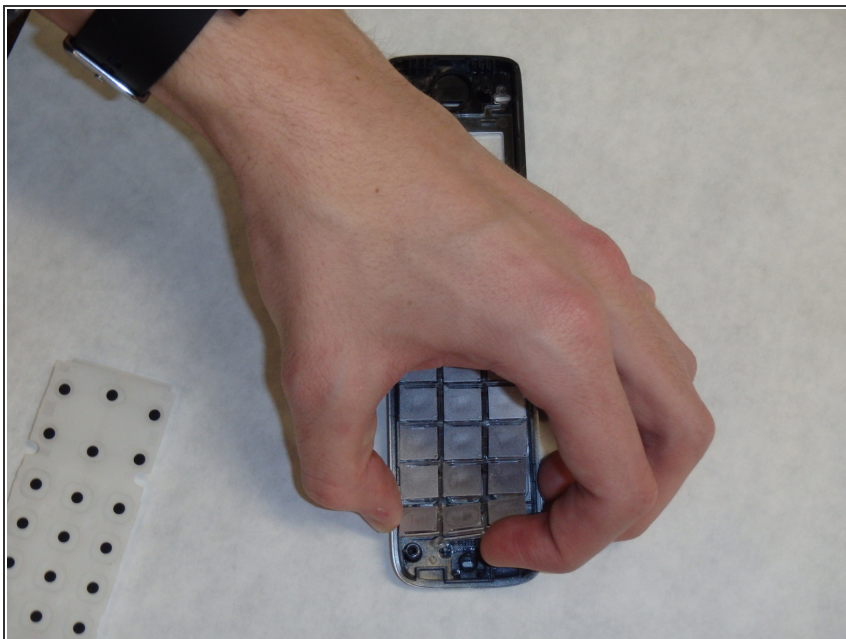

- Remove the clear button keypad

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 08:48:40 PM.